



METHOD OF CONTROL	<b>SWANTON</b> SUBDIVISION  <b>N</b> ↓  ↑ <b>S</b>	MILE	TGBO LIMITS	RTC STANDBY CHANNEL
18.7 ↑ OCS ↓ 25.6	(Jct with NECR) <b>US/CANADA BORDER</b> (Jct with Rouses Point sub.) <b>CANTIC</b>	18.7  25.6	18.7 ↑ ↓ 25.6	C28 T1 or * 5038 #

**SWANTON SUBDIVISION FOOTNOTES**

**1.0 Switches**

**Cantic** - Jct switch with Rouses Point sub is in normal position when set for movements from Swanton sub to Rouses Point sub.

**2.0 INTERLOCKING**

**2.1 Drawbridge**  
**Mile 24.3**  
NON-INTERLOCKED

Bridgetender is on duty from:

May 1 to June 13	from 0800 to 1800 Mon to Thurs
	from 0800 to 2000 Fri to Sun
June 14 to Sept 12	from 0700 to 2300 Daily
Sept 13 to Oct 12	from 0800 to 1800 Mon to Thurs
	from 0800 to 2000 Fri to Sun

When the bridgetender is on duty, his permission must be obtained before proceeding on bridge.

**2.0 EQUIPMENT RESTRICTIONS**

**2.1** Heaviest car permitted . . . . . 263,000 lbs.

**3.0 SPEEDS**

Mile	MPH
<b>18.7 to 25.6 zone</b>	<b>25</b>
24.3 (entire bridge)	10

End of Subdivision